

# JACK PUCK

THE SMART PRESS



The JACK PUCK are revolutionary presses created to transform extracts into a compact paste. Their mould is dismountable, allowing it to be warmed up in the oven to improve its effectiveness.

Equipped with a 2 ton or a 8 ton load capacity hydraulic jack, the JACK PUCK are light and compact presses easy to carry.

## USER INSTRUCTIONS

0. (Optional) Heat the mould, the mould's base and the cover in the oven to improve the effectiveness of the press (Maximum 100°C/200°F).
1. Fix the press to a table with the two C clamps supplied.
2. Put the extracts in the mould.
3. Put on the cover and tight it up with the wing nuts.
4. Tighten the release valve with the handle (clockwise).
5. Compress the extracts with an up-and-down movement of the handle.
6. Loosen the release valve using the handle (counterclockwise).
7. Remove the cover by removing the wing nuts first.
8. Put back on the wing nuts without installing the cover.
9. Tighten the release valve with the handle (clockwise).
10. Remove the compressed extracts from the mould using an up-and-down movement with the handle.
11. Loosen the release valve using the handle (counterclockwise).
12. Bring down the mould's base using your fingers.

\* Wax paper can be used at the bottom of the mould and between the cover and the mould to facilitate the removal of the extracts.


⚠ NEVER use a longer handle than the one supplied with the press.

## STORAGE

Always store your press vertically in a dry environment and with the ram and the saddle in the fully lowered position.

## MAINTENANCE


Lubricate with hydraulic jack oil the ram, saddle and pump mechanism (see ⚡ on drawing)

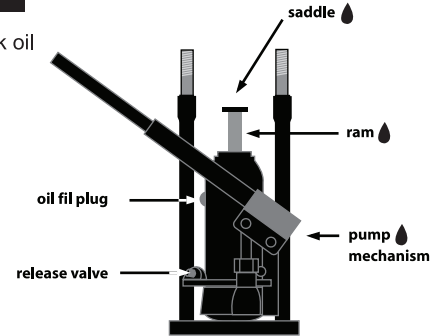

## CHECKING THE OIL LEVEL

Keep oil at the correct level at all times.

1. Turn release valve counterclockwise in order to allow ram to fully retract. It may be necessary to apply force to the saddle for lowering the ram.
2. Install the jack in vertical and level position and remove the oil fill plug.
3. Make sure the pump mechanism is down. The oil should be levelled with the bottom of fill hole. If not, add oil but do not overfill. Always fill with new, clean hydraulic jack oil.
4. Reinstall fill plug.
5. Check jack operation.

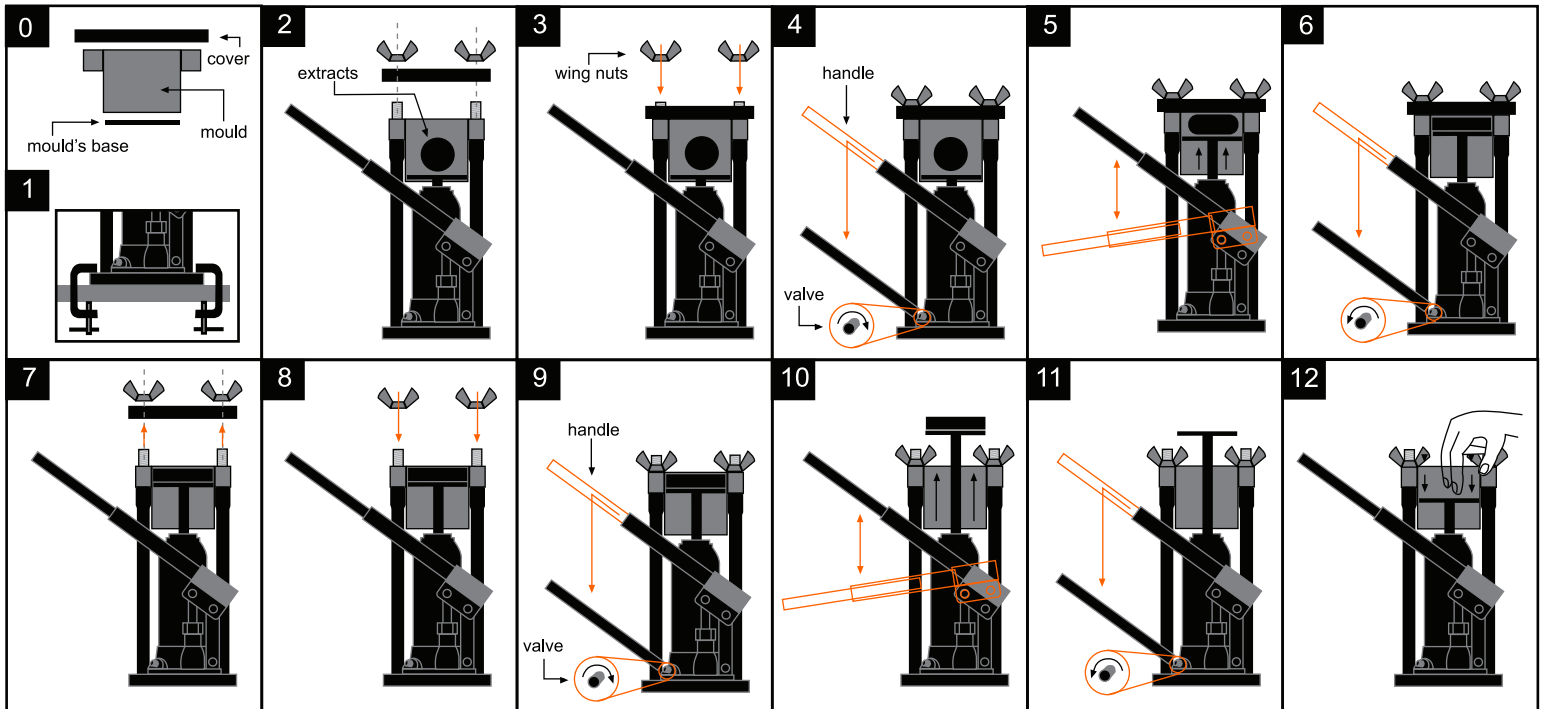

## WARNING

- Do not use the jack for any other uses than this press.
- Never use a longer handle than the one supplied with the press.
- Never turn the release valve more than one full turn. Do not unscrew release valve completely.
- Never heat the mold, the mould's base and the cover over 100°C/200°F.
- Use the press on hard, levelled and solid surfaces only.
- Keep oil at the correct level at all times.

## FOR INFORMATION OR TO ORDER

VISIT: [WWW.TRIMPRO.CA](http://WWW.TRIMPRO.CA)

Contact : [info@trimpro.ca](mailto:info@trimpro.ca) Call (Canada): +1-450-349-0811

To be used in accordance with all existing laws and regulations.  
The manufacturer does not accept any responsibility for damages caused to or by the JACKPUCK, resulting from an inadequate use or assembly.